



Installation Instruction

Performance Inlet hose



Toyota Yaris GR

G16E-GTS turbo I3




Description

This instruction shows how to replace the OEM inlet hose with do88 performance inlet hose.

At this type of installation we always recommend that you have mechanical experience and knowledge about safety during work on vehicles.


Parts list

- 1pc do88 Performance inlet hose
- 1pc 80 – 100 mm hose clamp
- 1pc 50 – 70 mm hose clamp
- 2pcs M8x20mm countersunk screws
- 1pc Aluminium joiner
- 1pc o-ring
- 1pc aluminum crank case joiner
- 1pc aluminum vacuum joiner
- 1pc OEM ear clamp 15.7 mm
- 1pc OEM ear clamp 31.6 mm

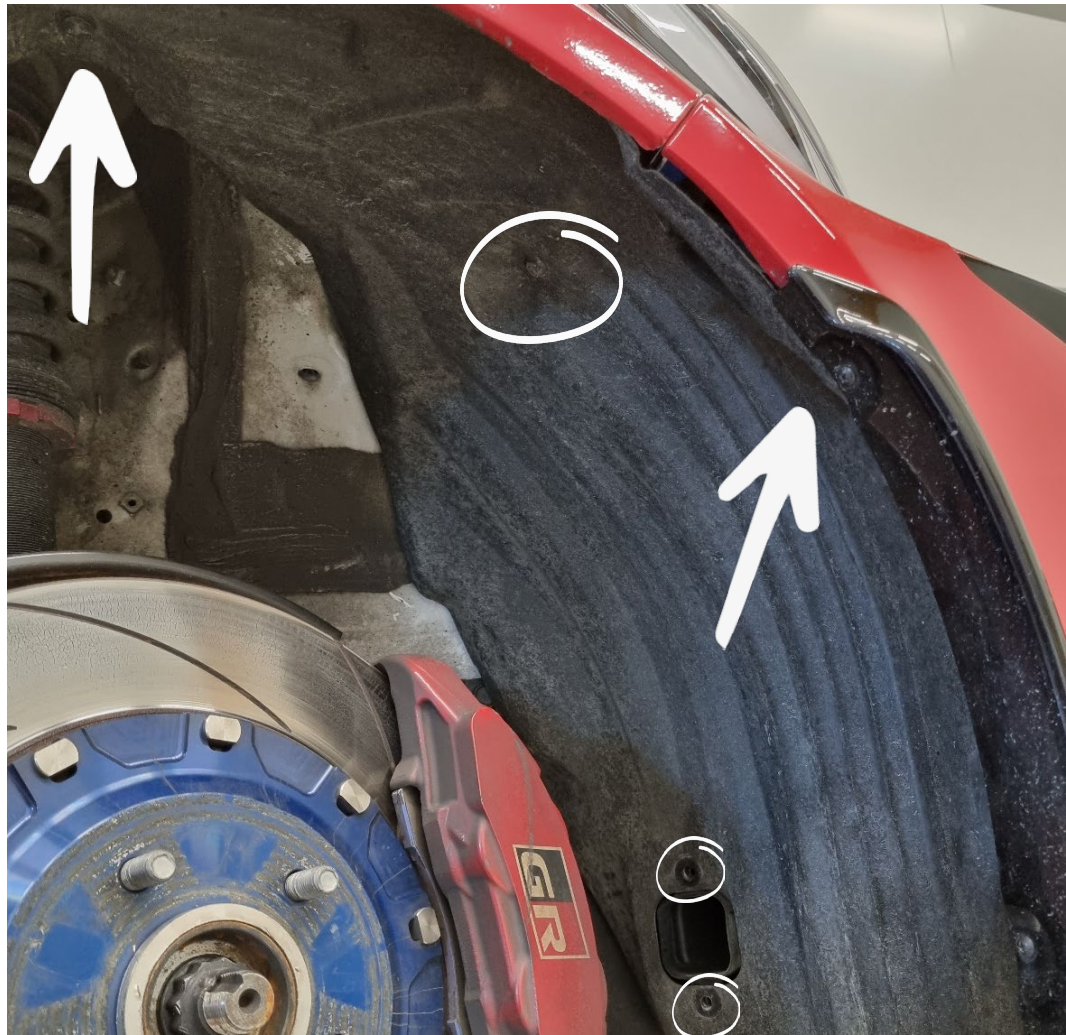


Step 1

Raise the front off the car and remove the right side wheel.
Remove 2x plastic clips with a small flathead screwdriver and 3x 10mm hex.

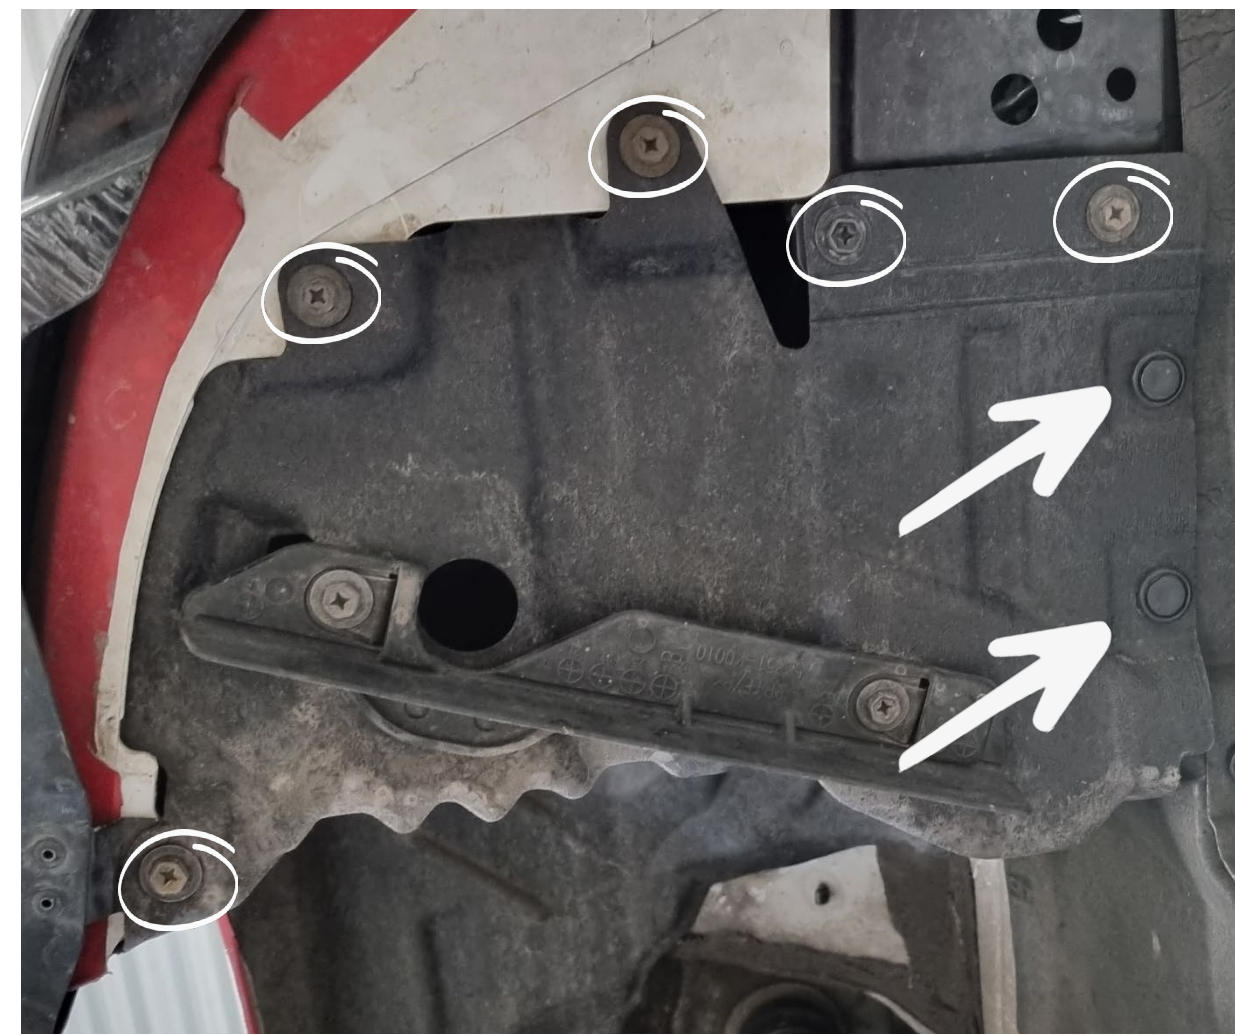

Step 2

Remove 5x 10mm Hex screws and 2x plastic clips with a small flathead screwdriver.

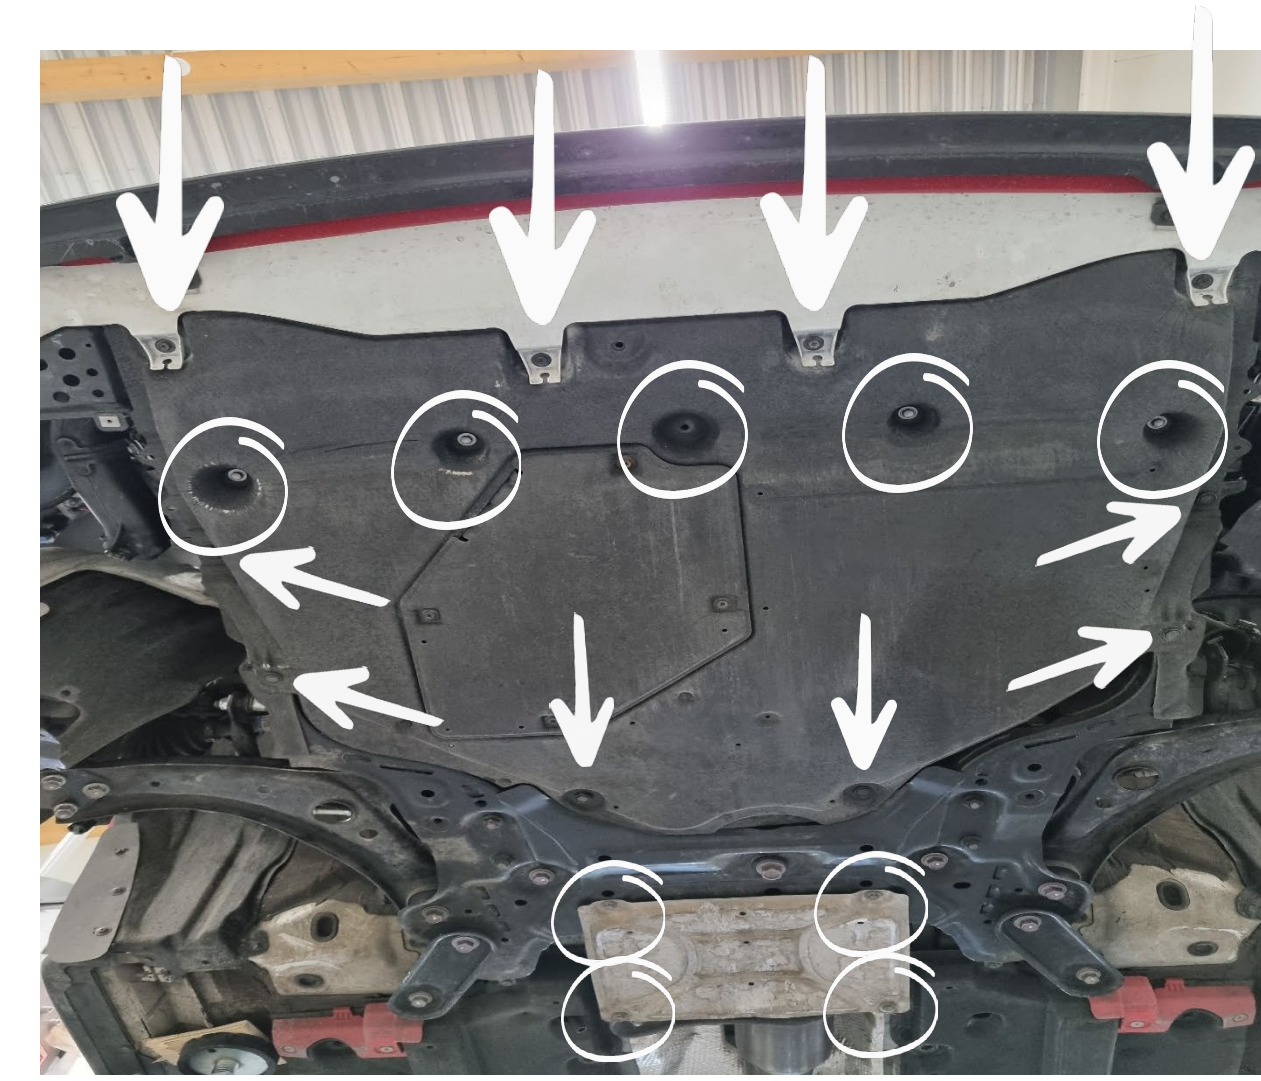

Step 3

Remove 4x 10mm hex screws.
Remove 5x 10mm hex screws and 6x plastic clips and remove the plastic cover.
Remove 4x 10mm hex for steel plate.




Step 4

Remove the plastic cover inside the right side wheel housing, 2x plastic clips.




Step 5

Loosen the hose clamp 1x 10mm hex.
Remove the screw and nut holding the OEM plastic turbo inlet tube, Hex 12mm.
Remove the pin screw from the turbo use a E8 Torx socket or 2x M8 nuts tightened towards each other.

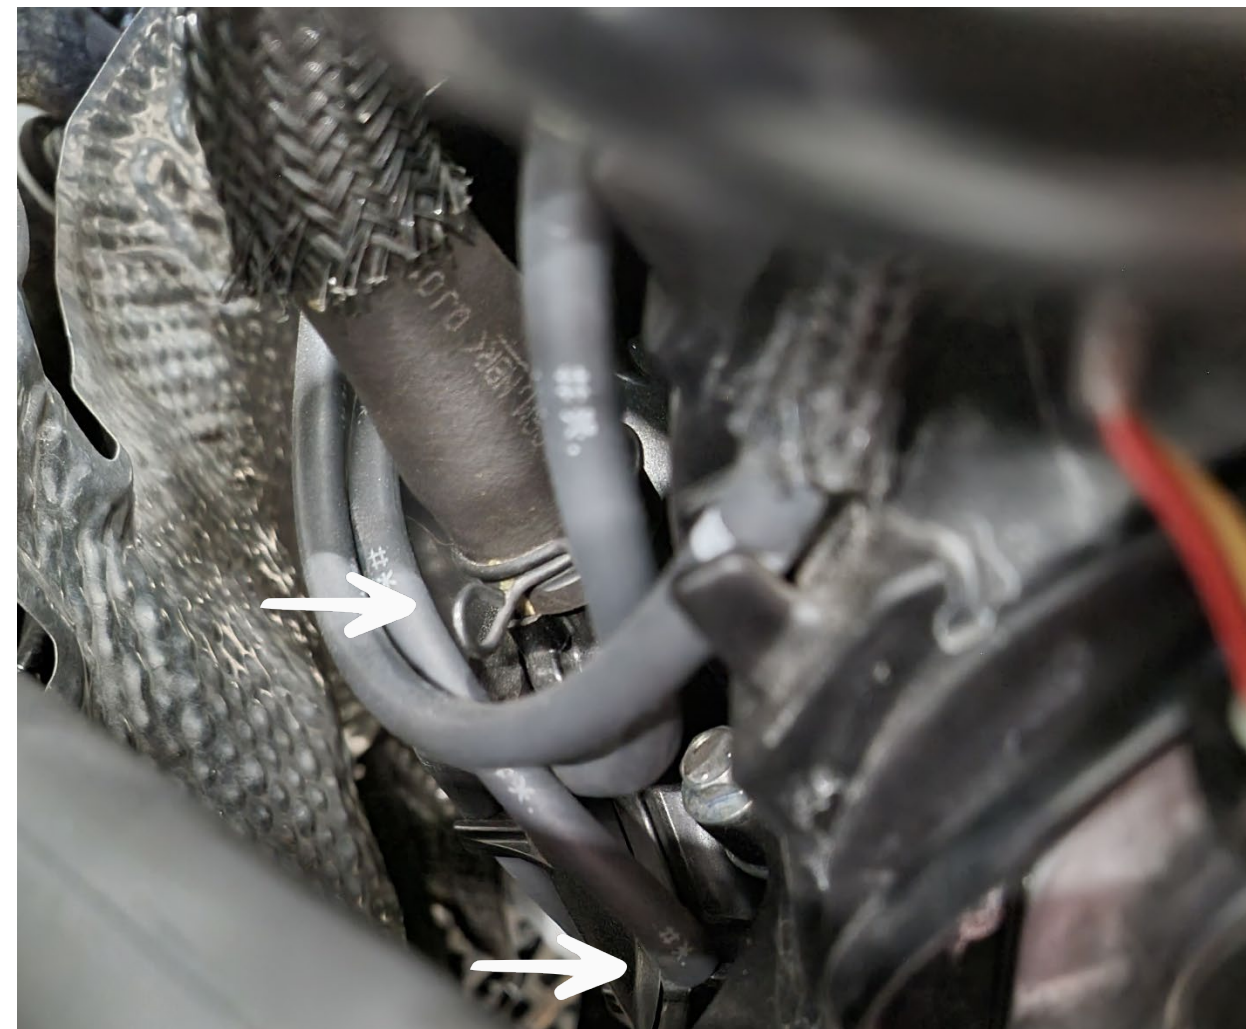

Step 6

Disconnect the crank case hose and vacuum hose from inlet pipe.

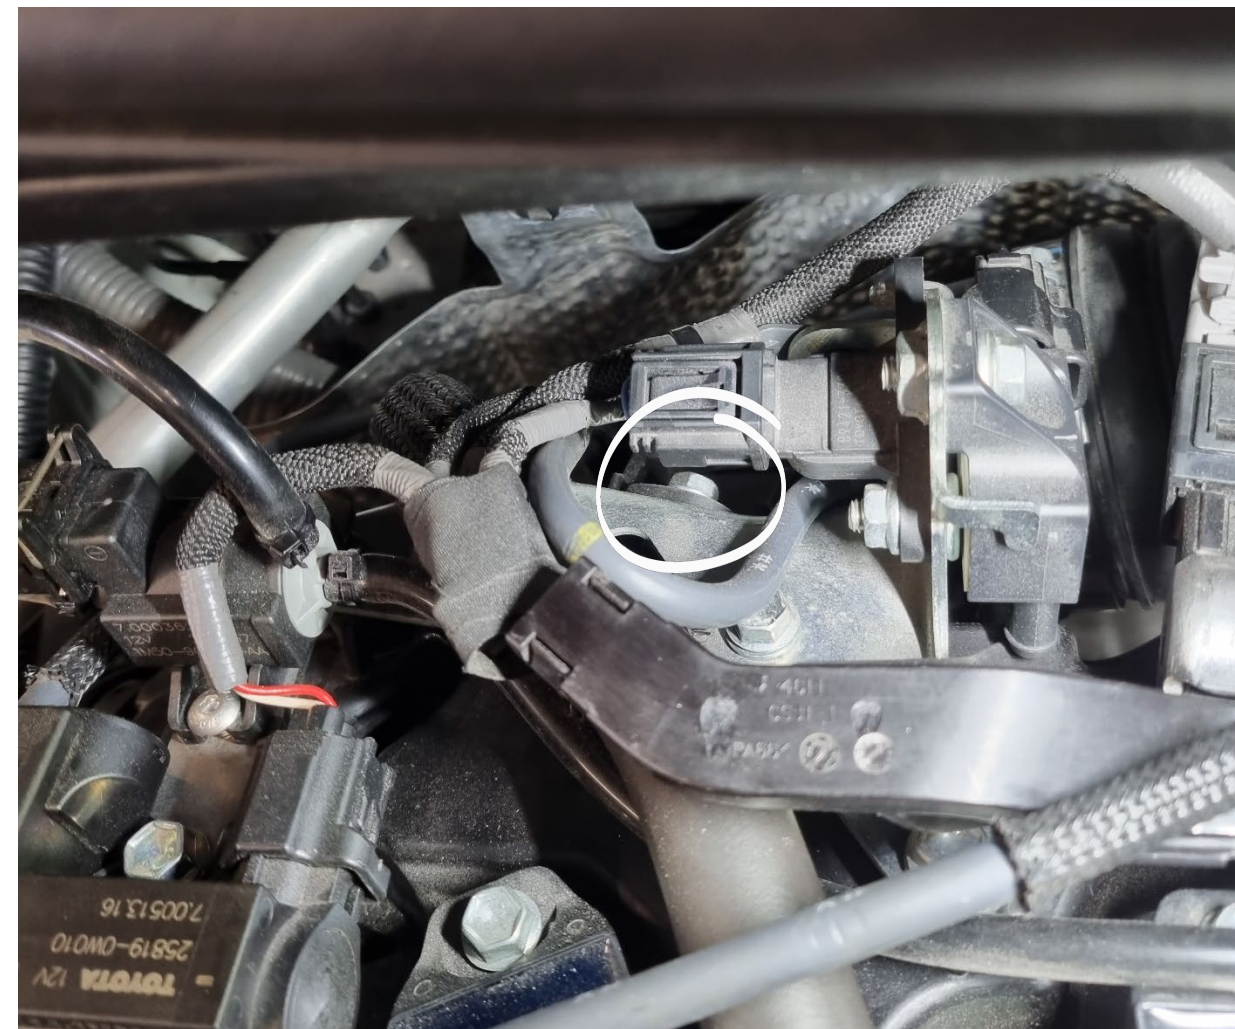


Step 7

Remove 1x 10mm hex screw holding the plastic pipe.



Step 8

Remove 2x 10mm hex hose clamps to loosen the hose.

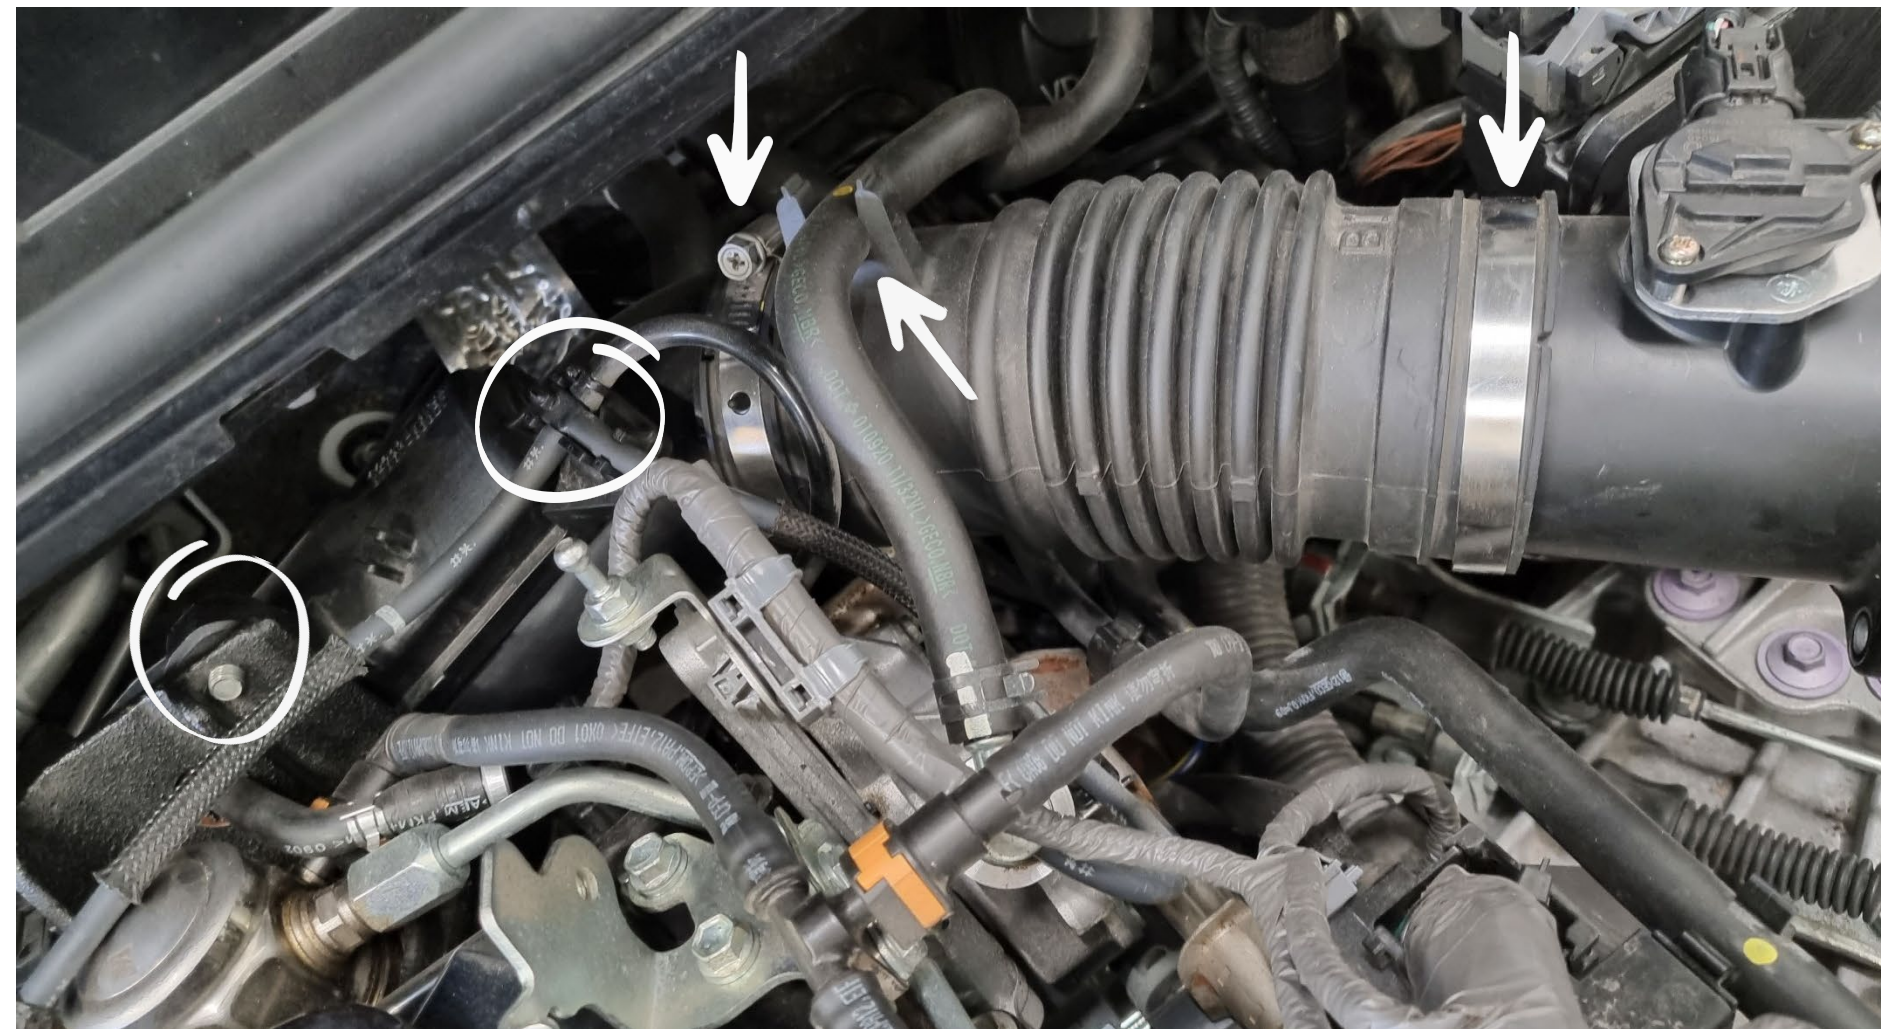

Step 9

Remove 2x 10mm hex hose clamps.
Remove 1x 12mm hex screw holding the plastic pipe.
Loosen the brake vacuum hose and vacuum hose connection.
Remove the hose from the car.



Step 10

At the rear side of the engine remove 1x 12mm hex screw holding the plastic pipe. Remove the entire turbo inlet pipe assembly from car.



Step 11

Install the included aluminium joiner with the included o-ring and 2x m8x20 countersunk screws.



Step 12

Fasten the included aluminium pipes in the silicone hose and secure with the included ear clamps.

Install the do88 inlet hose and use the included hose clamps.



Step 13

Re-install all other parts back in reversed order.



Thank you for purchasing another do88 product.

Please check our website frequently for new product releases.
If you have any questions or concerns about this product please do not
hesitate to contact us: do88.se/contact